



Installation Instructions

CLUB CAR A-ARM LIFT KIT 4" / 6" / 8"

FRONT DISASSEMBLY

- Raise unit and support frame with jack stands.
- Remove wheels and wheels hubs.
- Remove draglink from steering rack and tie-rod from steering arms.
- Remove the shock absorbers.
- Remove OEM A-arms (Delta Plates).
- Remove bolts from leaf spring mounting plate and the lower OEM parts.
- Remove four (4) bolts holding shock tower to frame and discard OEM spring plate. Save two (2) bolts.

FRONT ASSEMBLY

- Install new lower A-arm assembly by locating two (2) 3/8" bolts on assembly into frame holes and install nyloc nuts.
- Install two (2) rear bolts in A-arm assembly and tighten all four (4) bolts.
NOTE: Use two (2) OEM bolts with new nuts.
- Install supplied shock mount plate to front of OEM shock tower with two (2) 3/8" x 3/4" bolts and nuts.
- Install new upper A-arms with supplied bolts and nuts.
NOTE: A-Arms are marked D=Driver Side P=Passenger Side.
- Install shocks.
- Install spindles to upper and lower A-arms. Tighten bolts completely and back nyloc nuts off 1/2 – 3/4 turn for proper movement of suspension.
- Tighten king pin bolts.
- Re-install wheel hubs and steering components.
- Install wheels and remove jack stands.
- Adjust wheel camber by pulling bottom of tire out until desired camber.
- Tighten lower A-arm mounting bolts.
- Adjust toe-in with tie-rod (0"- 1/8" toe-in at front of tires).

REAR ASSEMBLY

- Raise unit and support frame with jack stands.
- Remove shocks from axle.
- Remove wire clips holding brake cables to frame.

GAS


- Remove access panel above bag well and remove ground wire from frame.
NOTE: *It will be necessary to extend or replace ground wire from frame to starter generator.*
- Cut nylon ties holding wiring harness to engine pan.


ELECTRIC

- On some models it may be necessary to lengthen motor wires.

NOTE: The following steps should be done on one side of the cart at a time.

- Remove OEM u-bolt and lower brake cable plate.
NOTE: *(DO NOT remove cable from plate).*
- Raise axle off of leaf spring. Remove leaf spring.
- Lower axle and re-install leaf spring.
- Install new u-bolt with shock mount onto leaf spring and re-install brake cable plate onto u-bolt. Start nuts onto u-bolts.
- Install axle seat between axle and leaf spring and tighten u-bolt.
- Repeat on other side of cart.
- Install shocks to new shock mounts.

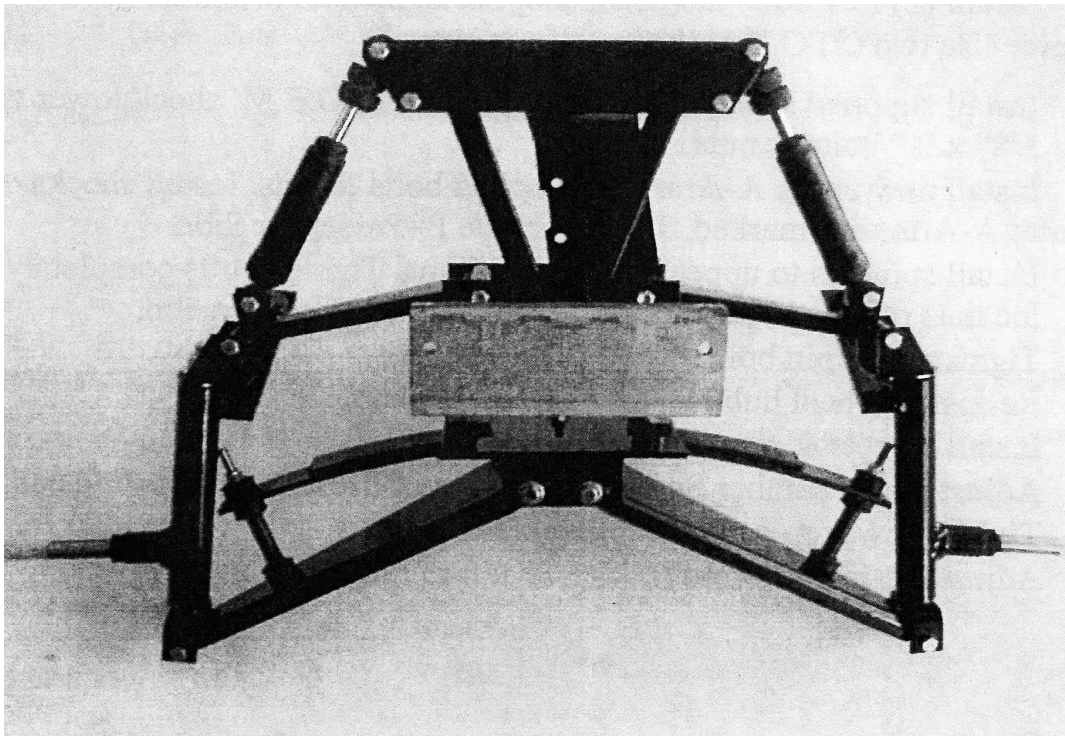

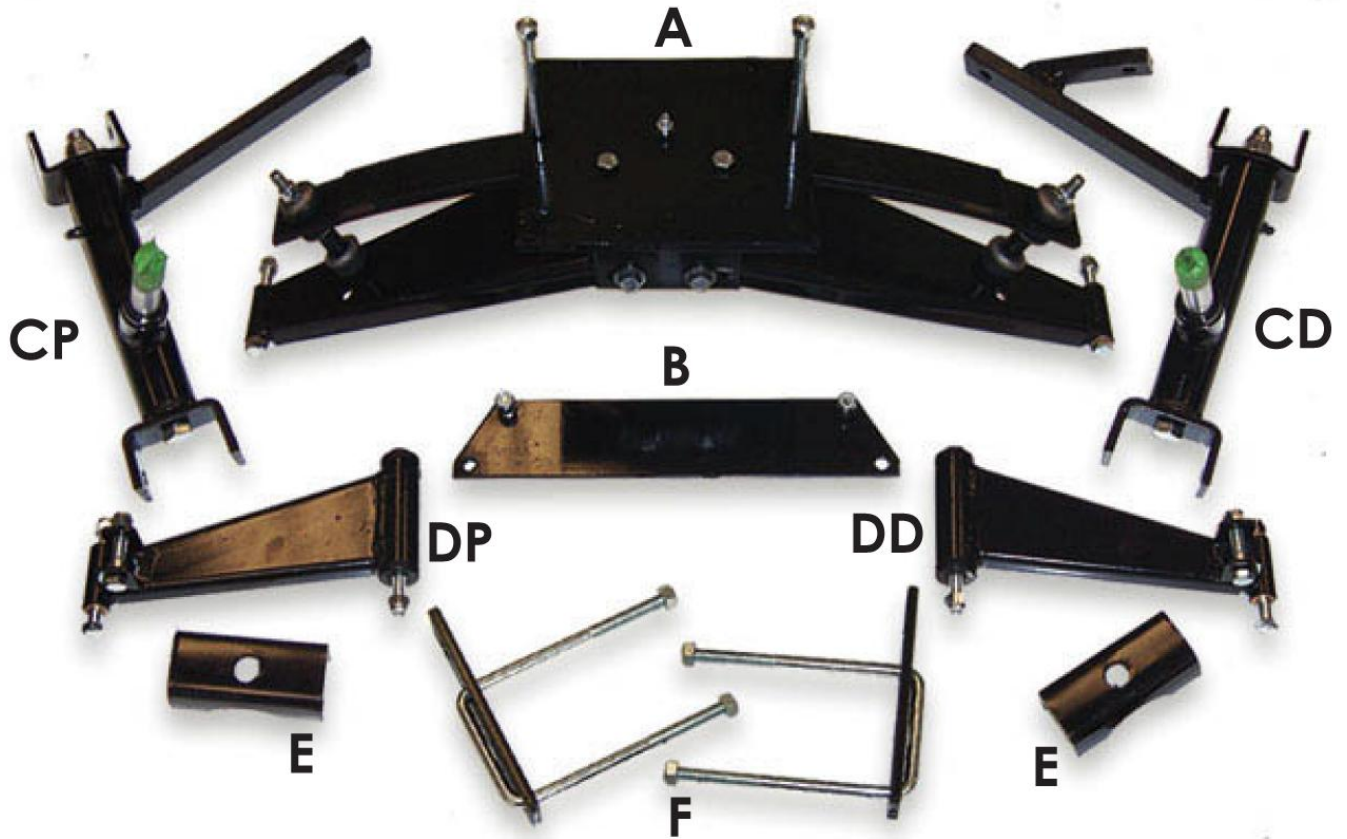

4" / 6" / 8" Club Car A-Arm Lift Kits

THIS KIT CONTAINS

- A** A-Arm Carrier (1)
- B** Front Upper Shock Mount (1)
- CP** Passenger Side Spindle (1)
- CD** Driver Side Spindle (1)
- DP** Upper A-Arm Passenger Side (1)
- E** Rear Seats (2)
- F** Rear U-bolts & Shock Mount Plates (2)

Instructions