



Installation Instructions


EZ-Go 6" GAS SPINDLE KIT 2001 – Present


FRONT INSTALLATION

- Jack up the front end of the cart and place it on the jack stands.
- Remove wheels and tires.
- Remove the tire rod ends from the spindles.
- Remove the spindles from the front axle. Clean and lubricate these bolts and king pin tube for the reinstallation of the spindles.
- Install spindles to the front axle using the stock king pin bolts and king pin tube.
- Reattach the tire rod ends to the new spindles.
- Securely tighten all bolts.
- Install wheels and tires.
- Take the cart off the jack stands and lower the cart.
- Drive the cart forward 10 – 20 feet and check the toe-in (Proper toe-in should be approximately 1/8").

REAR INSTALLATION

- Refer to the illustration below for axle placement.
- Install supplied shock extensions and longer spring shackles.

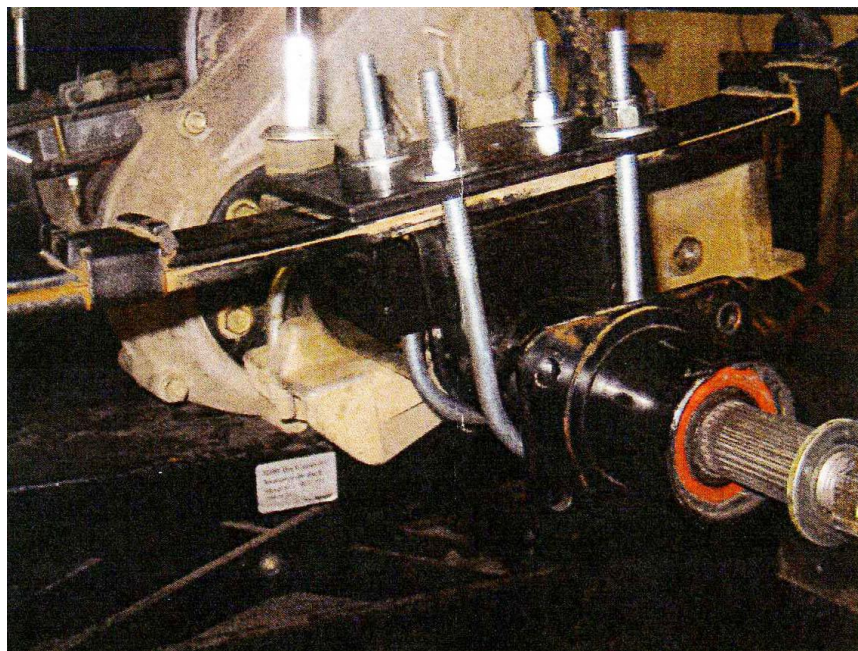

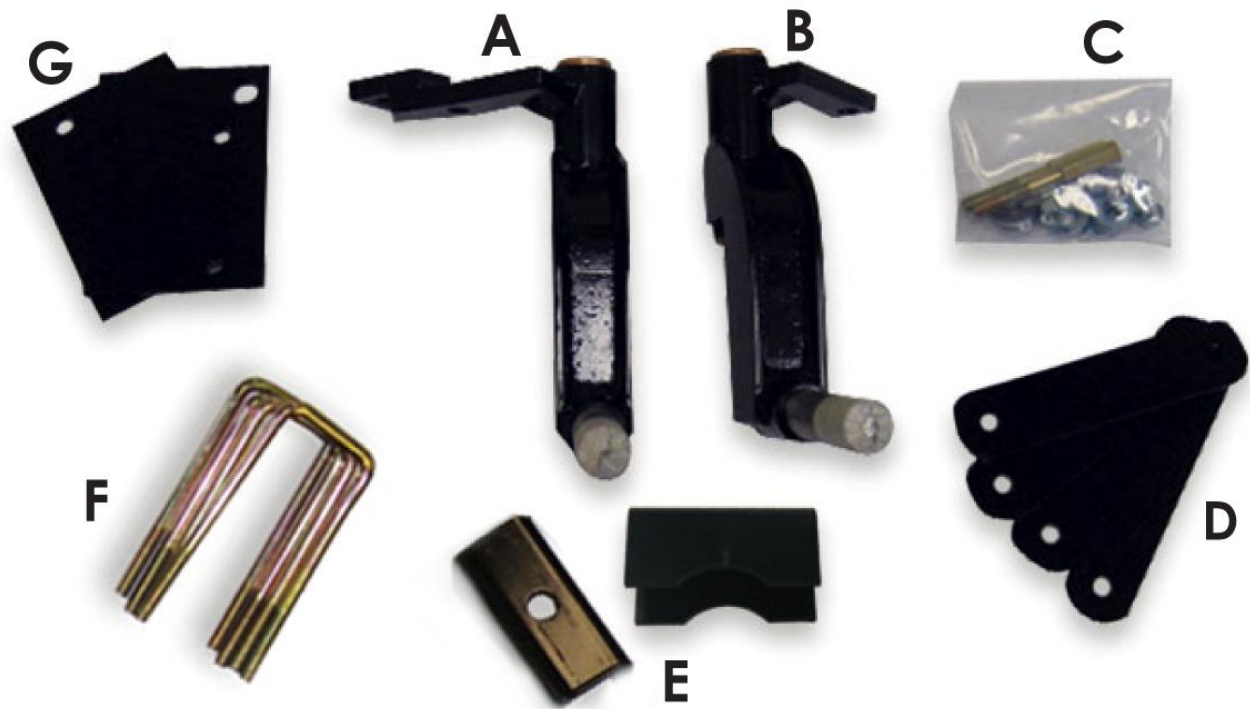

THIS KIT CONTAINS

- A** Passenger Side Spindle
- B** Driver Side Spindle
- C** Hardware, Instructions & Safety Decal
- D** Shackles
- E** Rear Axle Seats
- F** U-Bolts**
- G** Rear Shock Mount Plates

****NOTE:** *U-Bolts shown for electric – Gas U-bolts will look different.*