




Installation Instructions


EZ-GO FRONT AXLE LIFT INSTRUCTIONS

Gas 1994 – 2000

- Raise front of car and support with Jack stands.
- Remove wheels.
- Remove outer tie-rod end from steering arms.
NOTE: *Tie-rod ends are tapered. A tie-rod tool (pickle fork) may be needed to remove from steering axle.*
- Remove king pin bolts, king pins and wheel hub assembly.
- Remove shocks from axle.
- Remove the 7/16" bolts (6) from axle that holds to leaf springs.
- Remove OEM axle.
- Install new axle using the above instructions (opposite) if necessary.
- Replace old tie-rod tubes.
- Install steering risers to OEM steering arms and tighten securely.
(Refer to picture).
- Re-attach outer tie-rod ends to steering risers.
- Install wheel and set Toe-in (0 to 1/8" @ front of wheels)
- Tighten jam nuts on tie-rod tubes.

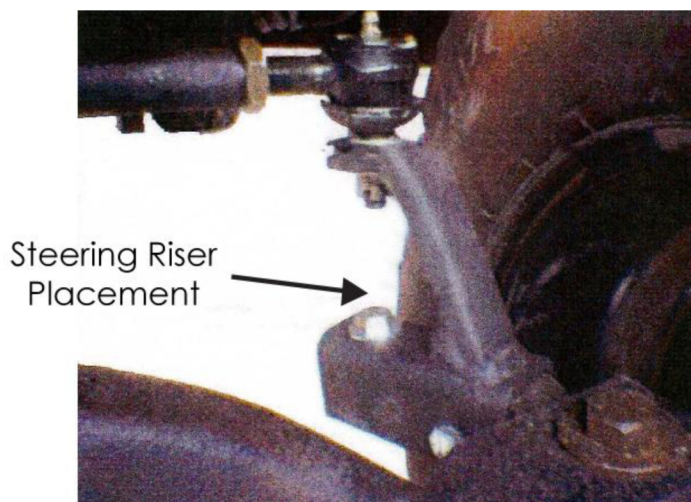

THIS KIT CONTAINS

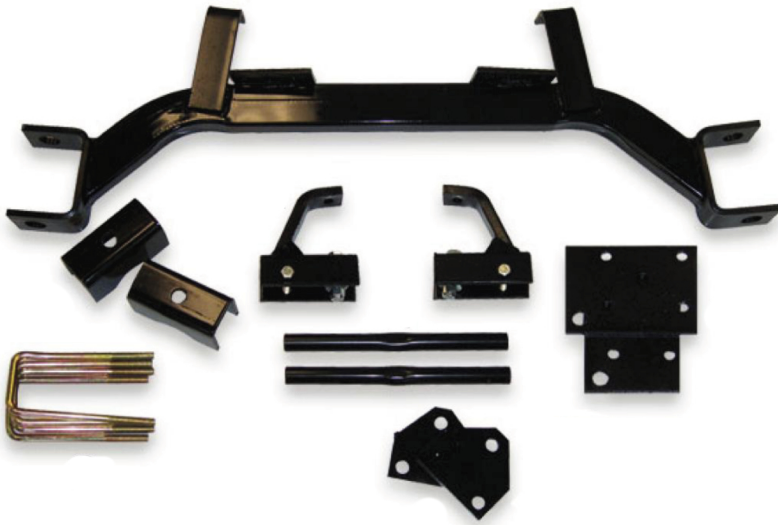

INCLUDED WITH 5" LIFTS ONLY



EZ-Go GAS REAR

