



Installation Instructions YAMAHA 7" LIFT KIT G2 – G19

FRONT

- Raise cart and support frame with jack stands.
- Remove front bumper.
- Remove tie-rods from steering arms.
- Remove spindles from factory A-arm.
- Remove factory A-arms.
- Install ASM A-arms.
- Install factory spindles on ASM front end.
- Install ASM steering risers on top of factory steering arms (D= Drivers Side / P = Passenger Side)
- Install tie-rods to ASM risers and adjust toe-in (Approximately 1/8")

REAR G14 – G19


- Raise cart and support frame with jack stands.
- Remove rear body.
- Remove shocks from top mounts.
- Remove sway bar from bottom mount (rear-end side).
- Confirm that all wiring and cables are free of binding.
- Install ASM "H" bracket to upper shock mounts.
- Install shocks to "H" bracket.
- Drill sway bar mount (rear-end side) to 1/2"
- Install ASM sway bar bracket to factory sway bar mount.
- Replace fuel line or bend fuel pump bracket on gas models.
- Inner fender wells may need to be trimmed or tied back for tire clearance.




Placement of
Rear Shock
Extensions

THESE KITS CONTAIN

G14 / G16 / G19

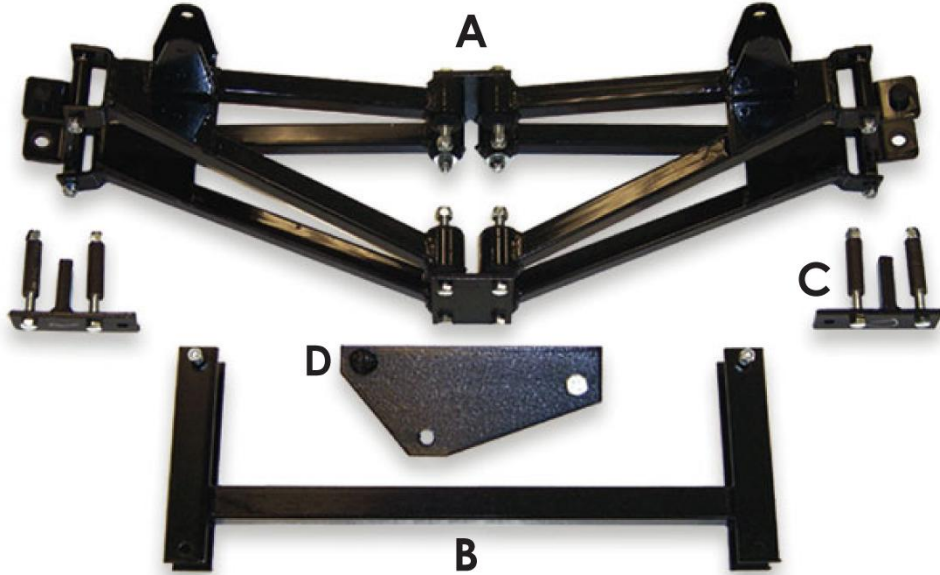

G2 / G9

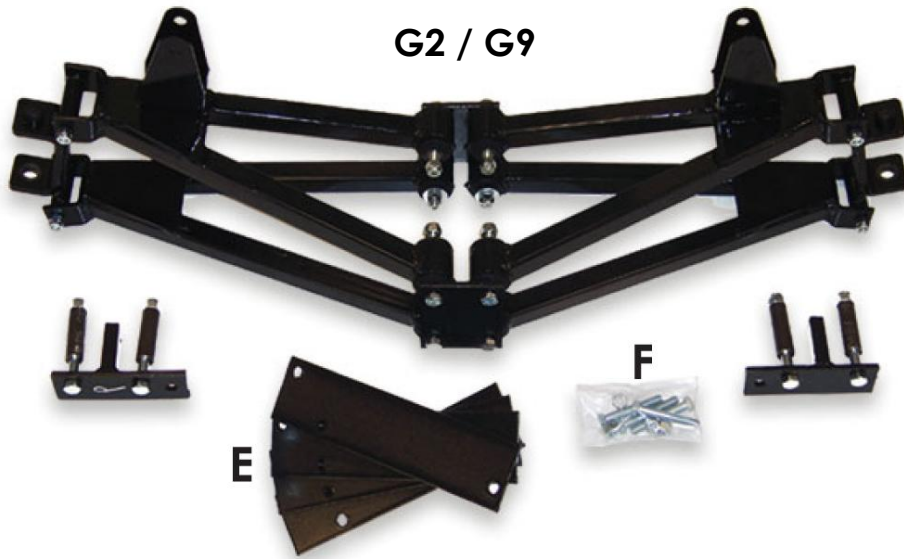

- A** A-Arm Assembly (both kits)
- B** H-Bracket (G14 - G19)
- C** Steering Risers (set of 2) (both kits)
- D** Sway Bar Bracket (G14 - G19)
- E** Rear Shock Extensions (set of 4) (G2, G9)
- F** Hardware (G2, G9)