



RXV 6" Spindle Lift

Contents:


A. Spindles (2)

B. U-Bolts (2)

C. Axle Seats (2)


D. Shock Mount Plates (2)

E. 3-Hole Spring Plates

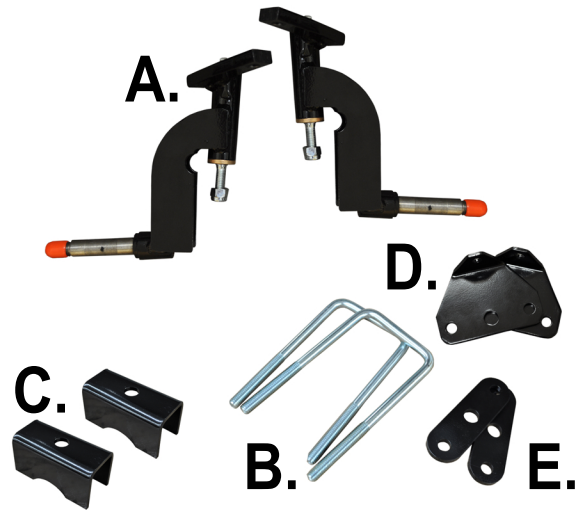

Front End Assembly

1. Remove tires and wheels from cart.
2. Remove hub from spindle (set aside as they will be used later in re-assembly)
3. Disconnect tie rods from spindles and remove the spindles from the cart.
4. Install new spindles using the included $\frac{1}{2}$ " x 6" bolts.
5. Re-install tie rods to the newly installed spindles using OEM hardware.
6. Re-install hubs on to the new spindles using OEM Nylock.
7. Install tires and wheels on to wheel hubs.
8. Tighten all bolts and fasteners.
9. Check front alignment and adjust as needed.

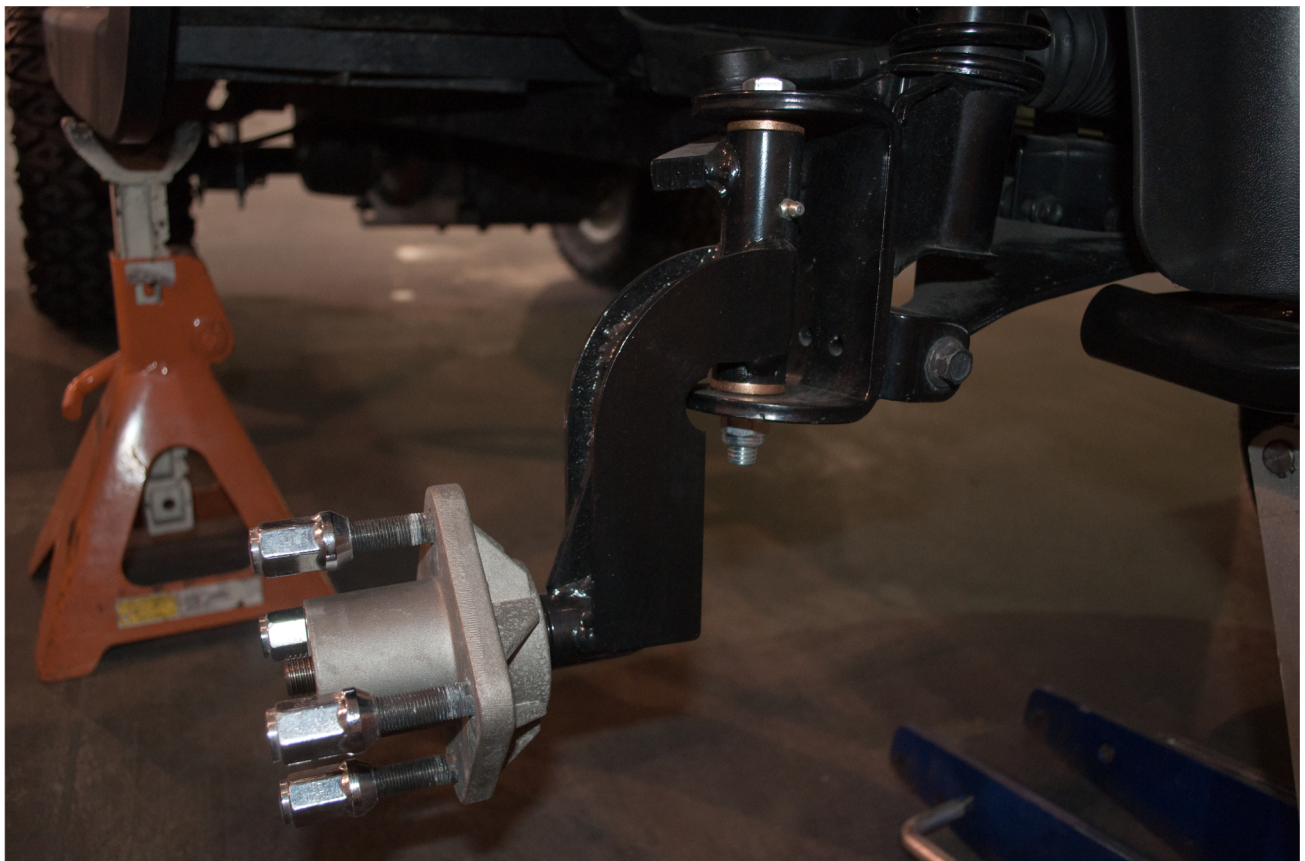

Rear End Assembly

1. Re-route passenger side brake cable by disconnecting cable from passenger rear drum brake. Re-route away from gas tank for clearance. Reconnect brake cable to drum.
2. Re-route drivers brake cable by disconnecting cable from drivers rear drum brake. Remove air filter assembly. Drill a hole as show in photo to guide brake cable through for clearance. Reconnect brake cable to drum. ***Alternate brake cable available that does not require drilling. Part #ASM-RK12**

